

# Programming

» If you make a mistake during programming, press the check button repeatedly until the keypad lights up. Then start

## ADDING USER PASSCODE

Press	Press	Press	Enter	Press	Enter	Press	Enter same	Press
			master passcode		New user passcode		New user passcode	

Note : The New User Passcode must be different from all of the Passcodes currently in the lock.

## CHANGING THE USER PASSCODE

Press	Press	Press	Enter	Press	Enter	Press	Enter	Press	Enter same	Press
			master passcode		Unwanted user passcode		New user passcode		New user passcode	

Note : The New User Passcode must be different from all of the Passcodes currently in the lock.

## CHANGING THE MASTER PASSCODE

Press	Press	Press	Enter	Press	Enter	Press	Enter	Press	Enter same	Press
			master passcode		master passcode		New master passcode		New master passcode	

**Note :** The programming of the lock is controlled by the master code. The master code **MUST EXIST** in the lock and cannot be deleted, but can **ONLY** be changed.

## DELETING USER PASSCODE

Press	Press	Press	Enter	Press	Enter	Press
			master passcode		unwanted user passcode	

## DELETING ALL USER PASSCODE

Press	Press	Press	Enter	Press
			master passcode	

## ENABLE EASY PASSAGE MODE

Press	Press	Press	Enter	Press
			master passcode	

With this EASY PASSAGE MODE active, you can open the door without requiring a passcode. PRESS ANY KEY to turn off this function when it is no longer needed.

## ENABLE ADVANCED PASSAGE MODE

Press	Press	Press	Enter	Press	Press	Press
			master passcode			

With ADVANCED PASSAGE MODE active, you can open the door without requiring a passcode. Only UNLOCK WITH MASTER CODE can turn off this function when it is no longer needed.

## ENABLE BEEPER

Press	Press	Press	Enter	Press	Press	Press
			master passcode			

## DISABLE BEEPER

Press	Press	Press	Enter	Press	Press	Press
			master passcode			

The beeper can be turned off if desired. Beeps will still sound to indicate a low battery.

## SET AUTO-LOCK TIMER

Press	Press	Press	Enter	Press	Press	Press	Enter	Press
			master passcode				auto-lock timer	

The automatic lock timer unit is seconds. Default is 4 seconds.

Minimum is 2 seconds, and the maximum is 255 seconds . if more then 255 seconds ,will always unlock.

PASSCODE

PASSCODE

PASSAGE

PASSAGE

BEEPER

BEEPER

AUTO-LOCK

AUTO-LOCK