

Programming

Command mode

»If you make a mistake during programming,press the check button repeatedly until the keypad lights up. Then start over.

FINGERPRINT	REGISTER FINGERPRINT										Scan fingerprint 6 times according to the voice navigation. Succeed each time with a short beep.	IU40	
	Press	Press	Press	Press	Enter	Press							
	✓	①	①	✓	Master passcode	✓							
FINGERPRINT	DELETE FINGERPRINT										Scan unwanted fingerprint	IU40	
	Press	Press	Press	Press	Enter	Press							
	✓	①	①	✓	Master passcode	✓							
FINGERPRINT	DELETE ALL FINGERPRINT											IU40	
	Press	Press	Press	Press	Enter	Press							
	✓	①	②	✓	Master passcode	✓							
PASSCODE	ADD USER PASSCODE										Note : The New User Passcode must be different from all of the Passcodes currently in the lock.		
	Press	Press	Press	Enter	Press	Enter	Press	Enter same	Press				
	✓	①	✓	Master passcode	✓	New user passcode	✓	New user passcode	✓				
PASSCODE	CHANGE MASTER PASSCODE										Note : The master code MUST EXIST in the lock and cannot be deleted, but can ONLY be changed.		
	Press	Press	Press	Enter	Press	Enter same	Press	Enter	Press	Enter same			Press
	✓	②	✓	Master passcode	✓	master passcode	✓	New master passcode	✓	New master passcode			✓
PASSCODE	CHANGE THE USER PASSCODE										Note : The New user passcode must be different from all of the passcodes currently in the lock.		
	Press	Press	Press	Enter	Press	Enter	Press	Enter	Press	Enter same			Press
	✓	②	✓	Master passcode	✓	Unwanted user passcode	✓	New user passcode	✓	New user passcode			✓
PASSCODE	DELETE USER PASSCODE												
	Press	Press	Press	Enter	Press	Enter	Press						
	✓	③	✓	Master passcode	✓	Unwanted user passcode	✓						
PASSCODE	DELETE ALL USER PASSCODES										Note : The master code cannot be deleted, but can ONLY be changed.		
	Press	Press	Press	Enter	Press								
	✓	④	✓	Master passcode	✓								
BEEPER	ENABLE KEY TONE					DISABLE KEY TONE							
	Press	Press	Press	Enter	Press	Press	Press	Enter	Press	Press	Press		
PASSAGE	EASY PASSAGE MODE					With EASY PASSAGE MODE active, the door will stay unlocked. Press any button to turn off this function when it is no longer needed.							
	Press	Press	Press	Enter	Press								
PASSAGE	ADVANCED PASSAGE MODE					With ADVANCED PASSAGE MODE active, open the door by twisting the handle directly. Turn off this mode only by entering master code and check key. * Press the check button 4 times in a row, the door will be immediately locked, which overrides any working modes.							
	Press	Press	Press	Enter	Press	Press	Press						
ADVANCED	AUTO-LOCK MODE					In AUTO-LOCK MODE the door will automatically lock after each unlocking, the auto-lock time depends on the setting of the auto-lock timer. * Press the check button 4 times in a row,door will be immediately locked, which overrides any working modes.							
	Press	Press	Press	Enter	Press	Press	Press						
ADVANCED	MANUAL LOCK MODE					In MANUAL LOCK MODE the auto-lock will turn off. After unlocking the door with a passcode or fingerprint, it will remain unlocked until any button is pressed.							
	Press	Press	Press	Enter	Press	Press	Press						
ADVANCED	SET AUTO-LOCK TIMER					The automatic lock time unit is seconds. Minimum is 2 seconds. Maximum is 43200 seconds (12 hours). Default is 4 seconds.							
	Press	Press	Press	Enter	Press	Press	Press	Enter	Press				
ADVANCED	ACTIVATE REMOTE CODE FEATURE					The activate code is generated by the website,(www.mylock.iulock.com) Deactivate remote code function when the activate code is 0.							
	Press	Press	Press	Enter	Press	Enter	Press						