

Features

- .Two ways to access: code, key
- . -22°F to +176°F temperature range
- . Low power consumption, 2 AA batteries for 1 Year Battery Life or 15,000 unlocks
- . Backlit keypad for use in low-light environments
- . Support 1 master code, 50 user codes (each side)
- . Built-in mobile remote code
- . Passage mode for hassle-free entry
- . Built-in disguise feature to protect your codes from prying eyes
- . Low battery warning indicator

No.	Item	Description
1	Keys	4 Mechanical keys (KW1 model)
2	Latch	Spring Latch (2-3/8" or 2-3/4" adjustable)
3	Master code	1Group (From 1 to 15 digit in length)
4	User code	50 Groups (From 1 to 15 digit in length)
5	Battery usage	2 AA Batteries (Not included)
6	Battery life	1Year Battery Life or 15,000 times unlock
7	Operation temperature	From -22°F to +176°F

Synchronize Passcode

Code synchronization is designed for convenience of passcode settings of double keypad.

This dual-sided lock features passcode synchronization. Once enabled (requires matching master codes on both sides), future passcode changes sync to the opposite side. Synchronization is enabled by default after factory reset.

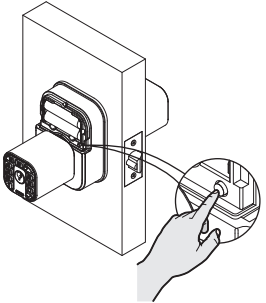



When code sync enable (✔9✔Master code✔4✔1✔)

Any changing passcode settings on any keypad will be synchronized to another keypad. Synchronization is only applicable to change the passcodes .

When code sync disable (✔9✔Master code✔4✔0✔)

The exterior keypad and the interior keypad are completely independent. The settings of the two keypads do not affect each other.

Quick Start

<p>STEP 1. Factory Reset</p> <p>Hold the "Reset " button for 7s → Long beep.</p> <p>Defaults: Master Code: 123456 Code Sync: ON</p>		<p>STEP 2. Default Master Code Test (123456✔)</p> <p>On both sides: Enter the default password 123456✔ on the keypad, a green indicator light should illuminate, accompanied by one long beep sound, within 5 seconds, the knob should unlock, allowing rotation to retract/extend the latch.</p> 
<p>STEP 3. Disable Code Sync (Optional)</p> <p>Only if you want independent codes on each side. Enter: ✔9✔123456✔4✔0✔</p> <p>Sync is ON by default. Skip this step if you want code sync.</p>		<p>STEP 4. Change Master Code</p> <p>Enter: ✔2✔123456✔123456✔your own master code✔ your own master code✔</p> <p>Example: your own master code is 2504 Enter:✔2✔123456✔123456✔2504✔2504✔</p> 

Programming

Command mode

» If you make a mistake during programming, press the check button repeatedly until the keypad lights up. Then start over.

PASSCODE	<p>ADD USER CODE</p> <p>✔1✔ Master code✔ User code✔ User code✔</p>	PASSCODE
	<p>CHANGE THE MASTER CODE</p> <p>✔2✔ Master code✔ Master code✔ New master code✔ New master code✔</p> <p>⚠ Note : The master code MUST EXIST in the lock and cannot be deleted, but can ONLY be changed.</p>	
	<p>CHANGE THE USER CODE</p> <p>✔2✔ Master code✔ Unwanted user code✔ New user code✔ New user code✔</p>	
	<p>DELETE ONE USER CODE</p> <p>✔3✔ Master code✔ Unwanted user code✔</p>	
	<p>DELETE ALL USER CODE</p> <p>✔4✔ Master code✔</p> <p>⚠ Note : The master code cannot be deleted, but can ONLY be changed.</p>	
BEEPER	<p>ENABLE KEY TONE (BEEPER)</p> <p>✔6✔ Master code✔ 1✔</p>	BEEPER
	<p>DISABLE KEY TONE (BEEPER)</p> <p>✔6✔ Master code✔ 0✔</p>	
PASSAGE	<p>EASY PASSAGE MODE</p> <p>✔5✔ Master code✔</p> <p>With EASY PASSAGE MODE active, the door will stay unlocked. Press any button to turn off this function when it is no longer needed.</p>	PASSAGE
	<p>ADVANCED PASSAGE MODE</p> <p>✔0✔ Master code✔ 1✔</p> <p>With ADVANCED PASSAGE MODE active, open the door by twisting the handle directly. Turn off this mode only by entering master code and check key. * Press the check button 4 times in a row, the door will be immediately locked, which overrides any working modes.</p>	
ADVANCED	<p>AUTO LOCK MODE</p> <p>✔0✔ Master code✔ 0✔</p> <p>In AUTO-LOCK MODE the door will automatically lock after each unlocking, the auto-lock time depends on the setting of the auto-lock timer. * Press the check button 4 times in a row, the door will be immediately locked, which overrides any working modes.</p>	ADVANCED
	<p>MANUAL LOCK MODE</p> <p>✔0✔ Master code✔ 2✔</p> <p>In MANUAL LOCK MODE the auto-lock will turn off. After unlocking the door with a passcode or fingerprint, it will remain unlocked until any button is pressed.</p>	
	<p>SET AUTO LOCK TIMER</p> <p>✔9✔ Master code✔ 3✔ Auto lock timer✔</p> <p>The automatic lock time unit is seconds. Minimum is 2 seconds. Maximum is 43200 seconds (12 hours). Default is 4 seconds.</p>	
	<p>ACTIVATE REMOTE CODE</p> <p>✔8✔ Master code✔ Activate code✔</p> <p>The activate code is generated by the website,(www.mylock.iulock.com) Deactivate remote code function when the activate code is 0.</p>	
	<p>ENABLE CODE SYNC</p> <p>✔9✔ Master code✔ 4✔ 1✔</p> <p>This dual-sided lock features passcode synchronization. Once enabled (requires matching master codes on both sides), future passcode changes sync to the opposite side. Synchronization is enabled by default after factory reset.</p>	
	<p>DISABLE CODE SYNC</p> <p>✔9✔ Master code✔ 4✔ 0✔</p> <p>The passcodes on each side operate independently and require individual programming.</p>	

Troubleshooting

The lock doesn't work?

Try replacing the battery or using the backup battery. If the lock still does not work, contact customer support.

Why can't I open the door?

You may be waiting too long to open the door. After entering a code, turn the handle to open the door while the lock LED indicator light is green. Once the LED indicator light is off, the lock will immediately return to the locked state.

Why can I open without a passcode?

You may have actived the passage mode, use master code access to turn off this function. If you just installed it, make sure the "UP" on the spindle is facing up (ceiling), please check 2.6 section.

I forgot all my codes.

The lock must undergo a hard reset in order to set the master code back to default and erase all other codes. In order to perform a hard reset, please refer to the above "Restore Factory Settings".

When I put the code in, it gives a green indicator light and beeps(no motor noise), but it doesn't unlock?

Please try using the self-diagnosis command. ✔9✔master code✔1✔7890✔ You will hear continuous buzzing and motor noise. If no motor noise, try turning the knob left and right quickly when it beeping. If the motor noise can be heard, it indicates that it has returned to normal. Run it for 2-3 minutes or more, then press any key to exit the self-diagnosis.

If none of the above information resolves your issue, please visit our website at: www.iulock.com

Warranty

1-Year Limited Mechanical & Finish Warranty and 1-Year Limited Electronics Warranty

Subject to the terms and conditions of the warranty, Richelock provides a 1-Year limited mechanical and finish warranty and a one-year limited electronics warranty to the original consumer purchaser ("Original User") of our Richelock brand product ("Product") against defects in material and workmanship, for as long as the Original User occupies the residential premises where the Product was originally installed. For full warranty details and limitations, please visit www.iulock.com

Important Safeguards

1. Read all instructions in their entirety.
2. Familiarize yourself with all warning and caution statements.
3. Remind all family members of safety precautions.
4. Protect your user passcode and master passcode.
5. Dispose of used batteries according to local laws and regulations.

<p>⚠ WARNING</p> <p>This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.</p>	
<p>Template</p> 